

## Replace the Carousel Sensor

Use this procedure to replace the carousel sensor in a **Producer™ II (Autostar II, Protégé II, and Amigo II), Producer™ III (6100, 7100, and 8100), Producer™ IIIN (6100N, 7100N, and 8100N) and AutoPrinter™ (AutoPrism and AutoEverest).**

Rimage approved parts must be used for this process. The product warranty may become void if parts not approved by Rimage are used; equipment or parts are tampered with, misused, neglected, or modified in any respect without the written consent of Rimage.

 **Notes:**

- Your system may not look exactly like the system pictured.
- The term “autoloader” is used throughout this document to refer to the products listed above.

### Before you begin


1. Stop or pause all jobs.
2. Power off the **external** or **embedded control center (PC)**.
3. Power off the **autoloader**.
4. Disconnect the **power cord** from the **autoloader**.
5. Disconnect the **power cord** from the power outlet.

### Required tools:

- Torx T10 screwdriver


### Remove the Carousel Sensor

1. Open the **door**.
2. Remove the **carousel**.
3. Disconnect the **cable** from the sensor.
4. Remove the **Torx T10 screw** (Qty. 1) securing the carousel sensor and bracket.
5. Remove the **carousel sensor and bracket** from the autoloader.
6. Slide the **carousel sensor** out of the bracket.

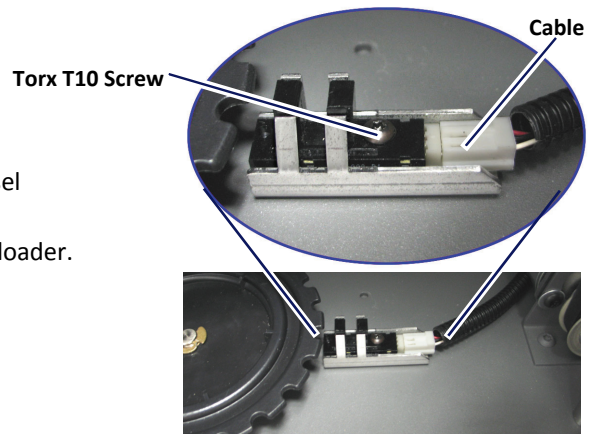



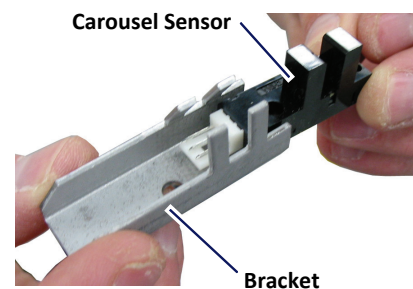

### Install the Carousel Sensor

1. Slide the new **carousel sensor** into the bracket.
2. Insert the **Torx T10 screw** (Qty. 1).
3. Position the **carousel sensor and bracket** in the autoloader.
4. Tighten the **Torx T10 screw** (Qty. 1) to secure the carousel sensor and bracket.
5. Connect the **cable** to the carousel sensor.
6. Install the **carousel**.
7. Close the **door**.
8. Connect the **power cord**. The autoloader is ready for use.



**Support information**

**Contact Rimage US, Asia/Pacific, Mexico/Latin America:**

-  **Web:** [www.rimage.com/support](http://www.rimage.com/support)
-  **KnowledgeBase:** <http://rimage.custhelp.com>
-  **North America:** 800-553-8312
-  **Asia/Pacific, Mexico/Latin America:** 952-946-0004

**When you contact Rimage Support, please provide:**

- Unit serial number and software version.
- Functional and technical description of the problem.
- Exact error message received.

**Contact Rimage Europe:**

-  **Web:** [www.rimage.de](http://www.rimage.de)
-  **Email:** [support@rimage.de](mailto:support@rimage.de)
-  **Tel:** +49-(0) 1805-7462-43
-  **Fax:** +49-(0) 6074-8521-101

Rimage Corporation reserves the right to make improvements to the equipment and software described in this document at any time without any prior notice. Rimage Corporation reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Rimage Corporation to notify any person or organization of such revisions or changes.