



# Rimage Video Protect Setup and Installation

## Before You Begin

Rimage Video Protect (RVP) works only with the Rimage Producer 6100, 7100, 8100, 6100N 7100N, 8100N and Professional 5400N, 5100N and 5300N.

❗ **Important!** Producer Software Suite 7.5 or higher must be installed on the autoloader control center.

📎 **Note:** The number of remaining conversion and recording credits displays in the *Production Server* screen of Rimage System Manager.

### 1. Install the dongle.

Insert the **dongle** in an open USB port on the autoloader or control center.

📖 **Tip:** The dongle should be installed prior to starting Production Server and submitting a RVP project.

### 2. Install the software.

📎 **Note:** Complete this step only if you received a software disc with this product or were instructed to do so by Rimage Support.

- Stop **Production Server** through Rimage System Manager.
- Load the Rimage Video Protect **software disc**, included with this package, into the autoloader's recorder.
- From the disc, run **RimageVP\_SP#.exe**.
- Follow the **prompts** to install the software. When the software installs, the autoloader initializes.

### 3. Set preferences.

#### Protect individual video DVD discs.

📎 **Note:** When this preference is set, RVP is enabled for this project only.

- Open **QuickDisc**.
- Select **Video DVD** in the *Create a New Project* screen.
- Add the **DVD compliant video files** to record.
- Select **Settings**.
- Select the **Use Rimage Video Protect DVD copy protection** checkbox.

#### Protect all video DVD discs.

📎 **Note:** When this preference is set, all video DVD discs you create are protected and each disc will use a RVP credit.

- Open **QuickDisc**.
- In QuickDisc, **Navigate:** Preferences > Recording.
- Select the **Use Rimage Video Protect DVD copy protection** checkbox.